



Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	CH.List		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Original	Replacement	Original	Replacement
	Blue		Blue / Prime Video / Random
	[=]		D.Menu / Top
	Up		Up
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Home		Menu / Home
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-





Original	Replacement
TEXT	Text
TEXT	Text / Goto
SUBTITLE	Subtitle
SUBTITLE	Subtitle / EQ
INFO	Info
INFO	Info / Angle
free	Shift + 1
Edit	Shift + Green / APP / REPEAT
deezer	Shift + 3
Netflix	Shift + Red / Netflix / SEARCH
prime video	Shift + Blue / Prime / RANDOM
YouTube	Shift + Yellow / YouTube / REPEAT A-B
Plex	Shift + 4
BROWSER	Media Display
Disney+	Shift + 2

Original	Replacement

