

 

 
 

 

 
 












 
 
 
 
 
 









Original	Replacement
 Standby	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Size	 Format
 I>	 Smart
 Subtitle	 Subt
 Timer	 Shift + AV
 Mix	 3D
 [_]	 Shift + Subt
 [?] Reveal	 Options
 Message	 Media
 Text	 Text
 Source	 AV
 Hold	 Pause
 Red	 Red
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue / H.Lock	 Blue
 TV / DTV	 TV/R
 CH.List	 List
 Guide / Scan	 Guide
 Fav. / Still	 Pre Ch
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Info / Display	 Info
 I/II / Nicam	 Dual
 SUB / Sleep	 Sleep
 ESC / Exit	 Exit
 TV Menu	 Menu
 DTV Menu	 D. Menu





Original		Replacement		Original		Replacement	
	Vol +		Vol +				
	Vol - -31552073C6594		Vol -				
	CH +		Ch +				
	CH -		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Zoom		Eject				
	Recall		Back				

