




























Original	Replacement
 Power	 Power
 Display	 Display / Media
 Eject	 Eject / Surround
 CH+	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 CH-	 CH- / Page-
 4	 4
 5	 5
 6	 6
 Vol+	 Vol+
 7	 7
 8	 8
 9	 9
 Vol-	 Vol-
 0	 0

Original	Replacement
 Clear	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Return	 Back / Return
 NTSC/PAL	 Picture / Format
 Program	 TV/Radio /
 Setup	 Setup / OPT /
 Edit	 Text / Goto
 Title	 Sound / Title
 Menu/PBC	 Menu / Home
 Red/Record	 Red / Netflix / Search
 Red/Record	 Rec / Rec Mode
 Green/TV/DVD	 Shift + 2
 Green/TV/DVD	 Green / APP / Repeat
 Green/TV/DVD	 Shift + 1
 Up	 Up
 Left	 Left
 Enter	 OK





Original	Replacement
 Right	 Right
 Yellow/Source	 Yellow / YouTube / Repeat
 Yellow/Source	 AV / Input / RDS
 Down	 Down
 Blue/HDD/DVD	 Shift + 7
 Blue/HDD/DVD	 Blue / Prime Video / Random
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 II>	 Shift + Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Zoom	 Zoom / Size
 1/All	 Shift + Green / APP / Repeat
 A/B	 Shift + Yellow / YouTube / Repeat

Original	Replacement
 Slow	 Shift + Play /
 Random	 Shift + Blue / Prime
 CM Skip	 Guide / EPG / -/--
 Bookmark	 Fav / Marker / PC
 Quality	 D.Menu / Top
 TimeShift	 Sleep / Timer
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer

