



Original	Replacement
System Power	Power
Standby	Shift + Power
Sleep	Sleep / Timer
6CH INPUT	Shift + Fav / Marker / PC
PHONO	Shift + Guide / EPG / -/-
TUNER	Shift + 6
CD	Shift + 3
V-AUX	Shift + 7
CBL / SAT	Shift + 0
MD / TAPE	Shift + 5
CD-R	Shift + 9
D-TV / LD	Shift + 1
VCR 1	Shift + 4
VCR2 / DVR	Shift + 8
DVD	Shift + 2
Vol+	Vol+
Vol-	Vol-

Original	Replacement
Level	Smart / List
Up	Up
Set Menu	Menu / Home
A/B/C/D/E	Info / Angle
Mute	Mute / Dimmer
Preset-	I<< / Preset-
Left	Left
Select	OK
Preset+	>>I / Preset+
Right	Right
Test	Text / Goto
Down	Down
On Screen / Display	Display / Media
Stereo Effect	Audio / Lang I/II
Hall / 1	1
Church / 2	2
Jazz Club / 3	3





Original		Replacement		Original		Replacement	
4	Rock Concert / 4	4	4				
5	Entertainment / 5	5	5				
6	TV Sports / 6	6	6				
7	Mono Movie / 7	7	7				
8	Movie Theater 1 / 8	8	8				
9	Movie Theater 2 / 9	9	9				
10	Dolby/DTS SUR. / 10	0	0				
11	SUR. Select / 11	-/--	Guide / EPG / -/--				
12	6.1/ES / 12	12	Fav / Marker / PC				

