



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Top	 Back
 On Screen	 Info
 Setup	 Options
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter/OK	 Ok
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Subtitle	 Subt
 Audio	 Dual
 Zoom	 Eject
 Angle	 Red
 Repeat	 Text
 A-B	 Green
 Scan	 Media
 Mute	 Mute

