





















 
 

 






Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Lang	Audio / Lang I/II
Tv/Radio	TV/Radio /
Game	D.Menu / Top
FAV	Fav / Marker / PC
Recall	Back / Return

Original	Replacement
Dev.List	Display / Media
EPG	Guide / EPG / -/-
Subtitle	Subtitle / EQ
Text	Text / Goto
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Zoom	Zoom / Size
Timeshift	Setup / OPT /
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Vol+	Vol+





	Original	Replacement		
	Vol-		Vol-	
	Rec		Rec / Rec Mode	
	Stop		Stop / Hold	
	Play		Play / Slow	
	Pause		Pause / Step / Freeze	
	<<		<< / Tune-	
	>>		>> / Tune+	
	I<<		I<< / Preset-	
	>>I		>>I / Preset+	
	Filelist		Smart / List	
	Red/FAV/Daily		Red / Netflix / Search	
	Green/DEL/Weekl		Green / APP / Repeat	
	Yellow/Move/P.Inf		Yellow / YouTube / Repeat	
	Blue/Lock/Timer		Blue / Prime Video / Random	

Original	Replacement	Original	Replacement

