Mandis shop

GYM001

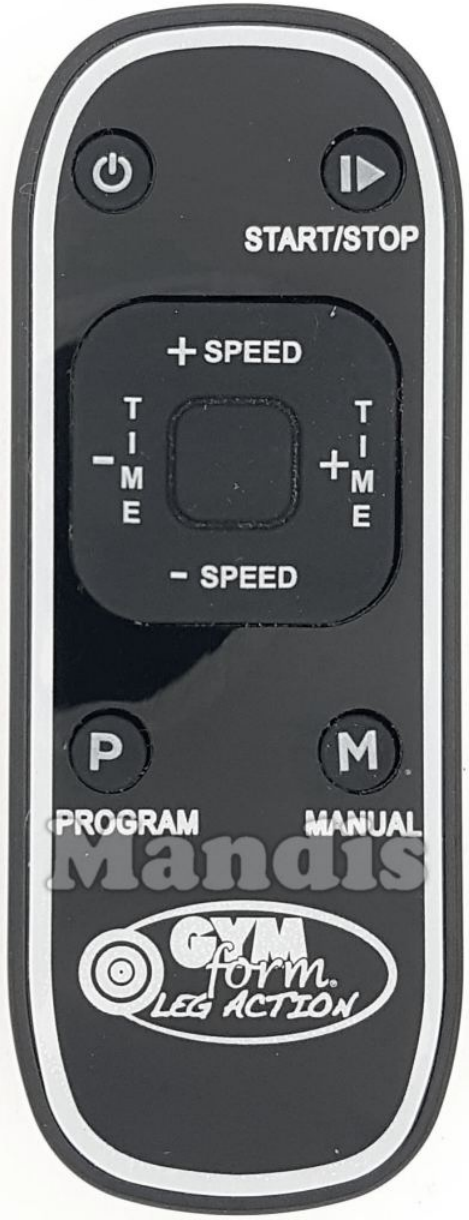

Original		Replacement	
	Power		Power
START/STOP	Start/Stop	PLAY MODE	Play
+ SPEED	Speed+		Up
- SPEED	Speed-		Down
TIME-	Time-		Left
TIME+	Time+		Right
PROGRAM	Program	HOME SMART	Smart
MANUAL	Manual	APP MEDIA	Media

Original	Replacement

https://remotecontrols.dk/en/Gym-Form/1063091-92940-replacement-remote-control-for-Gym-Form-GYM001.html