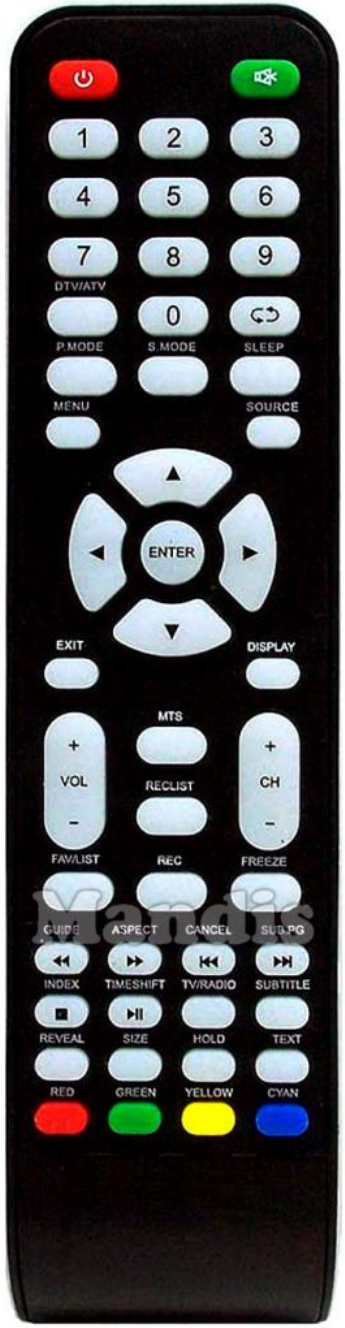

Original		Replacement	
	Power		Power
	Mute		MUTE
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
DTV/ATV	DTV/ATV	VOD	VOD
	Recall	BACK	BACK
SLEEP	Sleep	MEDIA	MEDIA
MENU	Menu	MENU	MENU
EXIT	Exit	EXIT	EXIT

Original		Replacement	
DISPLAY	Display	WIDE	WIDE
SOURCE	Source	SRC	SRC
ENTER	Enter	OK	OK
FAV/LIST	FAV/List	FAV 2. P/C	P/C / FAV
REC	Rec		Rec
FREEZE	Freeze		Pause
MTS	MTS	INFO	INFO
GUIDE	<<		Rewind
GUIDE	Guide	EPG 1. -/--	-/-- / EPG
ASPECT	>>/ Aspect		Fast Forward
CANCEL	I <</ Cancel		First
SUB.PG	>>I / Sub. PG		Last
INDEX	Stop/Index		Stop
TIMESHIFT	Play/Pause/Timeshift		Play
TV/RADIO	Tv/Radio	TV/R	TV/R
SUBTITLE	Subtitle		Subt.
REVEAL	Reveal	OPT+	OPT+

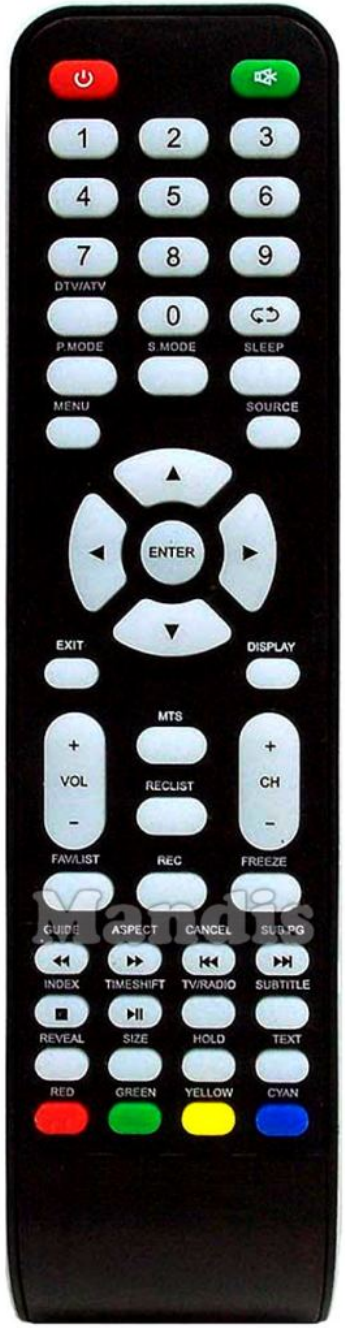

Original		Replacement	
SIZE	Size	V-FOR	V-FOR
TEXT	Text	TEXT	TEXT
S.MODE	S. Mode		Audio
▲	Up	▲	UP
▼	Down	▼	DOWN
▶	Right	▶	RIGHT
◀	Left	◀	LEFT
+ CH	CH+	+ CH	CH +
CH −	CH-	CH −	CH -
+ VOL	Vol +	+ VOL	VOL +
VOL −	Vol -	VOL −	VOL -
YELLOW	Yellow	C	Yellow (C)
RED	Red	A	Red (A)
GREEN	Green	B	Green (B)
CYAN	Cyan	D	Blue (D)
P.MODE	P. Mode	SHIFT + V-FOR	Shift + V-FOR
RECLIST	Rec List	SHIFT + FAV 2. P/C	Shift + P/C / FAV

Original		Replacement	
HOLD	Hold	SHIFT +	Shift + Audio