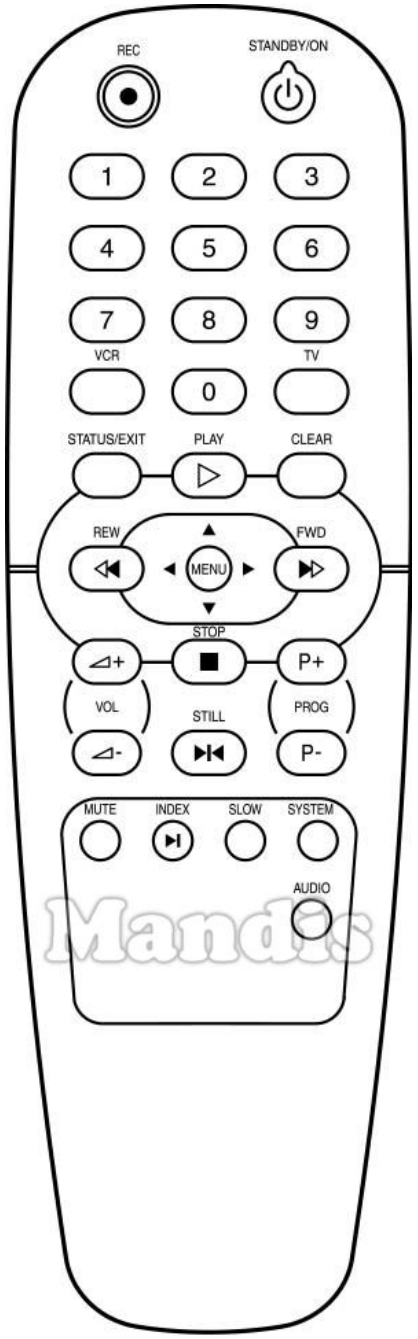

Original		Replacement	
STANDBY/ON	Standby/ On		Power
REC	Rec	REC MODE	Rec
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
STATUS/EXIT	Status/ Exit	CLEAR EXIT	Exit
CLEAR	Clear	SHIFT + CLEAR EXIT	Shift + Exit
PLAY	Play	PLAY MODE	Play
STOP	Stop		Stop
PLAY	Up		Up

Original		Replacement	
STOP	Down		Down
FWD	Right		Right
REW	Left		Left
FWD	>>		>>
REW	<<		<<
MENU	Menu	TOP MENU MENU	Menu
VOL	Vol +	+ VOL	Vol +
VOL	Vol -	VOL −	Vol -
P+ PROG	P+	+ CH	Ch +
PROG P-	P-	CH −	Ch -
STILL	>I <I/ Still		Pause
MUTE	Mute	MUTE	Mute
INDEX	>I / Index	REPEAT TEXT	Text
SLOW	Slow	TIMER AV	AV
SYSTEM	System	APP MEDIA	Media
AUDIO	Audio	SOUND DUAL	Dual

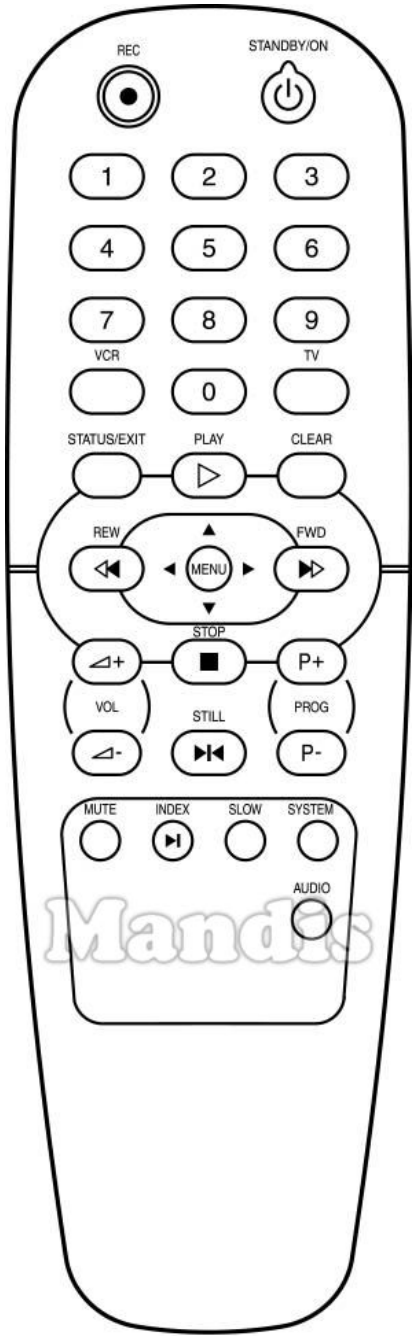

Original		Replacement	
STANDBY/ON	Standby/ On		Power
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
STATUS/EXIT	Status/ Exit	CLEAR EXIT	Exit
PLAY	Up		Up
STOP	Down		Down
FWD	Right		Right
REW	Left		Left
MENU	Menu	TOP MENU MENU	Menu

Original		Replacement	
VOL	Vol +	+ VOL	Vol +
VOL	Vol -	VOL −	Vol -
P+ PROG	P+	+ CH	Ch +
PROG P-	P-	CH −	Ch -
MUTE	Mute	MUTE	Mute